


Appliance Quick Start Guide

In your suite, there are several appliances to use at your convenience. Here are some guides to help you use the appliances:

DISHWASHER:

- 1) Prepare and load dishwasher.
- 2) Add detergent for cleaning and rinse aid for drying.
- 3) Turn on Dishwasher.
- 4) Select a cycle and option. (*Heavier cycles and options affect cycle length*)
- 5) Press **START/RESUME** and close door within 4 seconds. Dishwasher starts within 10 seconds.

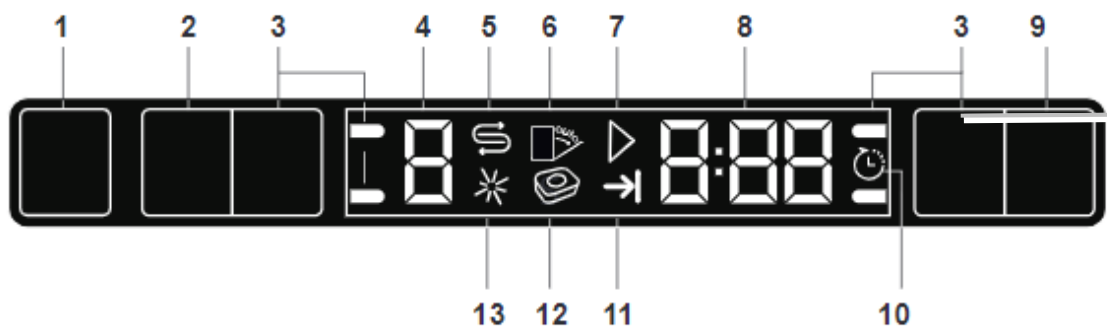

1. On/Off key
2. Program Selection / Program Cancel (3 seconds) key
3. Function keys & indicators F1 F2 F3 F4
4. Program indicator
5. Salt indicator (Select Models)
6. 7. Start / Cancel indicator
8. Time Delay / Program Time indicator
9. Time Delay key
10. Time Delay indicator
11. End of Program indicator
12. 13. Rinse Aid indicator

Cooktop:

1. Place the pot/pan in the centre of the element you would like to use (only induction will work)
2. Press On/OFF
3. Select temperature between 1-9
4. Turn off when finished

OVEN:

Select the function you would like to use.

Select the heat

Turn the dials back to start once finished

Control panel functions

Function symbols on the selector



Oven light (stays on while oven is in use).



Top and bottom heating elements. Thermostat setting from 120°F (50°C) to MAX.



Top heating element (small, low)



Double top heating element (large area grill) with fan. Thermostat setting from 120°F (50°C) to 390°F (200°C).



Top and bottom heating elements with fan. Thermostat setting from 120°F (50°C) to MAX.




Circular heating element with fan. Thermostat setting from 120°F (50°C) to MAX.



Lower heating coil with fan. Regulation of the thermostat from 120°F (50°C) to MAX.

Thermostat

Use the thermostat to set the cooking temperature you need. The thermostat can be adjusted from 120°F (50°C) to 480°F (200°C).

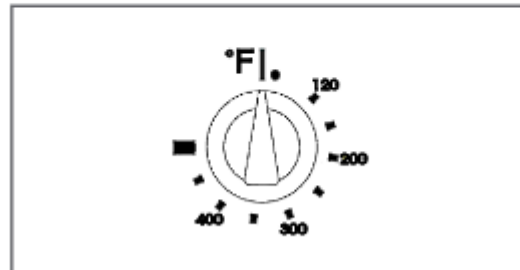

HOOD FAN:

For most suites, the hood fan can be turned on by pressing the button on the microwave. Pressing the same button cycle fan speeds or turns the fan off.

THERMOSTAT:

- 1) Touch **POWER** to turn on thermostat.
- 2) Press the arrow buttons to set target temperature.
- 3) Press the fan button to set fan speed.
- 4) Press "F/C" button to cycle between Fahrenheit and Celsius

PHONE:

- 1) Press **TALK** to activate handset.
- 2) To dial out locally, Press “8” before entering the full number. (e.g. 8 + 778-123-4567)
- 3) To dial out internationally, press “8 +1” before entering the full number.
(e.g. 8 + 1 + 626-123-4567)
- 3) To speak to Guest Services, press the “Guest Services” button on the handset.
- 5) Press **OFF** to deactivate handset.

WASHER:

- 1) Load laundry into washer and ensure door is closed.
- 2) Add detergent, fabric softener and bleach as desired in the dispenser drawer.
- 3) Touch **POWER** to turn on washer.
- 4) Select cycle under What to Wash
- 5) Touch and hold **START** for three seconds to start wash cycle.

DRYER

- 1) Load laundry/dryer sheets and ensure door is closed.
- 2) Touch **POWER** to turn on dryer.
- 3) Select What to Dry option
- 4) Touch and hold **START/PAUSE** for three seconds to start wash cycle.