


Appliance Quick Start Guide

In your suite, there are several appliances to use at your convenience. Here are some guides to help you use the appliances:

DISHWASHER:

- 1) Prepare and load dishwasher.
- 2) Add detergent for cleaning and rinse aid for drying.
- 3) Turn on Dishwasher.
- 4) Select a cycle and option. (*Heavier cycles and options affect cycle length*)
- 5) Press **START/RESUME** and close door within 4 seconds. Dishwasher starts within 10 seconds.

OVEN:

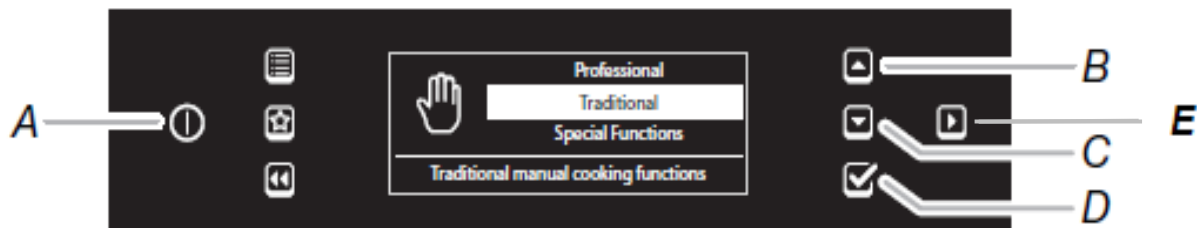


LEGEND:

A) On/Off | **B)** Up Arrow | **C)** Down Arrow | **D)** Select/Confirm Settings | **E)** Start Button

- 1) Turn the oven on. The list of cooking functions will be displayed.
- 2) Select “**Traditional**” function and choose the “**Conventional**” method.
- 3) Select “**Function Details**” to set temperature, preheat options and time.
- 4) Touch the “**Start**” button once, and the display will indicate the shelf position number on which the food should be placed.
- 5) Touch the “**Start**” button once more to begin cooking.

HOOD FAN:

For most suites, the hood fan can be turned on by pressing the fan icon button on the microwave. Pressing the same button cycle fan speeds or turns the fan off. 

To open the hood fan, hold the center edge and pull the fan out towards you.

THERMOSTAT:

- 1) Touch **POWER** to turn on thermostat.
- 2) Press the arrow buttons to set target temperature.
- 3) Press the fan button to set fan speed.
- 4) Press "F/C" button to cycle between Fahrenheit and Celsius

Please be advised that once the temperature is set – the temperature will change back to the previous temperature and change, and the heat/cooling takes affect.

The heat/cooling system can sense when the suite is occupied and will adjust itself to save energy if no one is home.

PHONE:

- 1) Press **TALK** to activate handset.
- 2) To dial out locally, Press "8" before entering the full number. (e.g. 8 + 778-123-4567)
- 3) To dial out internationally, press "8 +1" before entering the full number. (e.g. 8 + 1 + 626-123-4567)
- 3) To speak to Guest Services, press the "Guest Services" button on the handset.
- 4) To listen to messages, press the "Messages" button on the handset and follow prompts from the automated system.
- 5) Press **OFF** to deactivate handset.

WASHER:

- 1) Load laundry into washer and ensure door is closed.
- 2) Add detergent, fabric softener and bleach as desired in the dispenser drawer.
- 3) Touch **POWER** to turn on washer.
- 4) Select cycle using knob and select any additional options/settings.
(Heavier cycles and options affect cycle length)
- 5) Touch and hold **START** for three seconds to start wash cycle.

DRYER:

- 1) Clean lint screen (Located in the door opening of the dryer)
- 2) Load laundry/dryer sheets and ensure door is closed.
- 3) Touch **POWER** to turn on dryer.
- 4) Select cycle using knob and select any additional options/settings.
(Heavier cycles and options affect cycle length)
- 5) Touch and hold **START/PAUSE** for three seconds to start wash cycle.
- 5) Our dryers are energy efficient, and loads may be slower than other machines you have used elsewhere.